 


CONTENTS

IMPORTANT INFORMATION -----	3
Important Safety Instructions-----	3
INTRODUCTION -----	5
Special Features-----	5
INSTALLATION -----	6
Package Contents-----	6
Choosing the Best Location-----	6
Connecting the Base Unit-----	7
Charging the Batteries-----	7
DC Power-----	8
Low Battery-----	8
Cleaning the Battery Contacts-----	8
Wall Mounting the Base Unit-----	9
USING YOUR PHONE -----	10
Handset-----	10
Base Unit-----	10
Powering on the Handset-----	11
Standby Mode-----	11
Powering Off the Handset-----	11
Range Condition-----	11
Registration-----	12
BASE SETTINGS VIA HANDSET -----	14
Deregister a Handset-----	14
Dial Mode-----	14
Modify PIN-----	15
Flash Time-----	15
Set Base to Default-----	16
HANDSET SETTINGS -----	17
Alarm-----	17
Ring Setup-----	17
Configure Ringtone for Incoming Calls via Exterior-line (fixed line)-----	18
Configure Ring Volume for Incoming Calls Exterior-line (fixed line)-----	18
Configure Ringtone for Intercom Calls-----	18
Configure Ring Volume for Intercom Calls -----	18
Do Not Disturb-----	19
Tone Setup-----	20
Set Key Tone On/Off-----	20
Set Battery Low Alert Tone On/Off-----	20
Set Out of Range Alert Tone On/Off-----	20
Language Setting-----	21
Change Handset Name-----	21
Auto Answer-----	22
Set Auto Answer Mode On/Off-----	22
A0073108	



Call Barring	22
Date & Time Settings	23
Set Date Format	23
Set Date	24
Set Time Format	24
Set Time	25
Set Handset to Default	25
Display the Phonebook Entries	26
Add Entries to Phonebook	27
Symbols	27
Edit an Entry in the Phonebook	28
Delete an Entry from the Phonebook	28
Delete all Entries in the Phonebook	29
Review Caller ID List	29
Save Caller ID Information to Phonebook	30
Delete a Record from the Caller ID List	30
Delete all Records in Caller ID List	30
Review Dialed Numbers List	31
Add a Dialed Number to the Phonebook	31
Delete a Dialed Number	31
Delete All Dialed Numbers	32
MAKING A CALL	34
Dial a Number	34
Call from Phonebook	34
Call from Caller ID List	34
Call from Dialed Numbers List	35
Call the Last Dialed Number	35
Enter a Pause in Dialing Sequence	35
PAGING AND INTERCOM	36
Locate Misplaced Handset(s) with the Base Unit	36
Intercom between Handsets	36
Transfer a Call to another Handset	37
CALL CONFERENCING	38
Call Conferencing	38
RECEIVING A CALL	40
Via Exterior-line (fixed line)	40
During Intercom	41
Switch to a Waiting Call	41
Mute a Call	42
TROUBLESHOOTING	43
CARE AND MAINTENANCE	45



IMPORTANT INFORMATION

Important Safety Instructions

To reduce the risk of fire, electric shock and / or injury to persons, always follow the following safety precautions when using this telephone equipment.

1. Read, understand, and follow all instructions.
2. Unplug this telephone from the wall outlet before cleaning. Do not use liquid or aerosol cleaners. If necessary, use a soft cloth lightly moistened with a mild detergent solution.
3. Do not use this telephone near a bathtub, kitchen sink, wash bowl, laundry tub, swimming pool, a wet basement or anywhere else there is water or liquid.
4. Do not place this telephone on an unstable cart, stand or table. A fall could cause serious damage to the phone.
5. Slots and openings in the cabinet at the back or bottom are provided for ventilation to protect the unit from overheating. These openings must not be blocked or covered. Do not place this telephone on a bed, sofa, rug or other similar surface. This telephone should never be placed near or over a radiator or heat register. This telephone should not be placed in a built-in installation unless proper ventilation is provided.
6. Never push objects of any kind through slots in the phone. They could touch dangerous voltage points or short out parts that could result in a risk of fire or electric shock. Never spill liquid of any kind on the telephone.
7. Unplug this telephone from the wall outlet and refer to a qualified service representative in any of the following situations:
 - a) If liquid has been spilled into the telephone.
 - b) If the telephone has been exposed to rain or water.
 - c) If the telephone does not operate normally by following the operating instructions. Adjust only those controls that are covered by the operating instructions. Improper adjustment of other controls may result in damage and will often require extensive work by a qualified technician to restore the telephone to normal operation.
 - d) If the telephone has been dropped or the case has been damaged.
 - e) If the telephone exhibits a distinct change in performance.
8. Do not use the telephone to report a gas leak in the vicinity of the leak.
9. Avoid using this telephone during an electrical storm. There may be a remote risk of electric shock from lightning.
10. Never install jacks in a wet location unless the jack is specifically designed for wet locations.
11. Never touch uninsulated telephone wires or terminals unless the telephone line has been disconnected at the network interface.
12. Use with caution when installing or modifying telephone lines.
13. To reduce the risk of electric shock, do not disassemble this product, but take it to a qualified service centre when some service or repair work is required. Opening or removing covers may

IMPORTANT INFORMATION



- expose you to dangerous voltages or other risks. Incorrect reassembly can cause electric shock when the appliance is subsequently used.
14. Use only the power cord and batteries indicated in this manual. Do not dispose of batteries in fire. They may explode. Check with local codes for possible special disposal instructions.
 15. Plug the adapter to the socket-outlet that is nearest to the telephone and is easily accessible.
 16. For service or replacement, you can purchase a suitable headset through our service center or retailer shop.
 17. We advise that this telephone should not be used near intensive care medical equipment or by persons with pacemakers.
 18. **CAUTION**
RISK OF EXPLOSION IF BATTERY IS REPLACED BY AN INCORRECT TYPE.

USE RECHARGEABLE BATTERY TYPE ONLY, size AAA , 1.2V, 600mAH

DISPOSE OF USED BATTERIES ACCORDING TO YOUR LOCAL WASTE FACILITY.



Use only with a Class 2 Power Source, 7.5V DC, 300mA for the Base Unit

SAVE THESE INSTRUCTIONS FOR FUTURE REFERENCE



Special Features

- 1.9GHz digital FHSS cordless phone system
- Multiple handsets capability, supports up to 5 handsets
- 3-way conference call (two handsets & an incoming call)
- Call transfer to other handsets
- Hands-free function
- Phonebook with 40 entries; Phonebook dialing
- Redial; Redial list of last 10 dialed numbers
- Support fixed line Type I and Type II CID (FSK and DTMF)
- Caller list with last 20 Caller ID records
- Hold function
- Mute function
- Intercom between two handsets
- Alarm clock including snooze option
- Page to all handsets
- Tone / Pulse dialing
- Digital volume control
- Audio setup that includes 10 melodies for exterior-line and intercom rings
- Range tone option
- Battery low tone option
- Barring handset from dialing
- Display the talk / intercom time
- Auto answer function
- English / German / French / Italian / Spanish / Dutch intelligent LCD display



Package Contents

Check to be sure that the following items are included. If there is any missing or visible damage, contact the original place of purchase and do not attempt to operate if it is damaged.

- One Base Unit with Handset
- One Handset with Charger Base
- 2 Belt Clips
- Four Batteries (1.2V / 600mAh)
- One 7 foot Telephone Line cord
- Two DC adapters (DC 7.5V / 300mA)
- One Wall Mount
- Owner's Manual

Choosing the Best Location

 
Calls are transmitted between the base unit and handset, or between handsets, by way of wireless radio waves. For maximum distance and noise-free operation, here are some important guidelines:

1. The location of base unit should be close to both a phone jack and a continuous power outlet that is not switch-controlled.
2. Place the base unit at a high, central location with no obstructions such as walls.
3. Keep the base unit and the handset away from sources of electrical noise such as a TV, personal computer, or another cordless phone.
4. The base unit can be placed on the tabletop or mounted on a wall.

Note: While using the handset:

If you are near a working microwave oven, noise may occur from the receiver or speaker. Move away from the microwave oven and closer to your phone's base unit.

If more than one cordless telephone set is being used and your handset is near another cordless phone's base unit, noise may occur. Move away from the other phone's base unit and closer to your base unit.



Your new telephone includes the highest quality NiMH (Nickel Metal Hydride) rechargeable batteries. Following the simple instructions below can significantly improve your batteries operational results.

Connecting the Base Unit

1. Plug one end of the telephone line cord into the 'TEL. LINE' jack at the bottom of the base unit and plug the other end of the cord into a modular telephone wall jack. (If your wall jack is not modular, contact your local telephone company for assistance).
2. Plug the supplied DC adapter's barrel plug into the 'DC 7.5V' jack at the bottom of base unit and the other end into a standard 120V AC wall outlet.

Charging the Batteries

1. Press the release point on the back cover of the handset and slide downwards to open the battery compartment.
2. Insert the supplied two batteries into the compartment according to polarity marks (+ / -).
3. Slide the back cover upwards until it snaps into place.
4. Place the handset on the base unit and make sure the Charge Indicator on the base unit illuminates, which indicates that it has begun charging. The battery icon on the handset LCD will change from the mode of 'very low', to 'low', to 'medium', to 'full' and repeat as a cycle.
5. Charge all batteries for at least 15 hours prior to initial use.



DC Power

Caution:


1. Use only with the supplied DC Adapter (AC 120V, DC 7.5V, 300mA).
2. Plug the adapter into a continuous power outlet, which is near the base unit and is not switch-controlled.
3. The DC adapter must be kept connected at all times. (It is normal for the adapter to be warm during use).
4. Do not remove the battery from the handset to charge it. Do not remove or damage the battery casing.
5. For the longest battery life and the maximum talk & standby time, completely charge and discharge the batteries every time.
6. If you do not expect to use your phone for a month or longer, remove the batteries from the handset. The batteries may leak chemicals that can destroy electronic components.
7. To avoid the risk of explosion, do not dispose of the batteries in a fire. Check with your local waste facility for disposal instructions.

Low Battery

The battery icon on the handset LCD shows the current level of battery strength. If the battery is not properly charged, there will be a warning tone when the handset is in use and "BATTERY LOW" is displayed. While this occurs, the handset may not function normally.

Clean Battery Contacts

 To maintain a good charge, it is necessary to clean all battery contacts on the handset and the base unit with a soft, dry cloth about once a month. You may also use a pencil eraser or other contact cleaner, but never use any liquids or solvents.




Wall Mounting the Base Unit

The base unit can be mounted on a standard wall phone plate.

1. Plug the DC adapter's barrel plug into the jack marked "7.5V 300mA" at the bottom of the base unit.
2. Plug the telephone line cord into the jack marked "TEL. LINE".
3. Hold the base unit up next to the wall jack and plug the line cord into the wall jack.
4. Place the base unit on the posts of the wall plate and push down until the base unit is secured firmly.
5. Plug the DC adapter into a standard wall outlet.


Note: If you are not using a standard wall plate to mount the phone on a wall, you may also mount it with ordinary screws. Affix two screws on the wall, remember to leave 1/8 inch of the screw extending from the wall.

 Handset

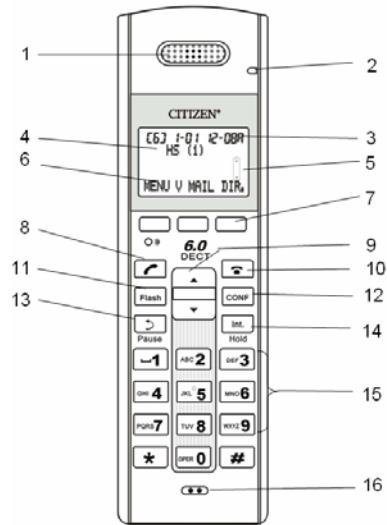


1	Receiver
2	Light Indication for <ul style="list-style-type: none"> • New Call • Incoming Call • Line-in-use • Voice Mail (VMWI)*
3	Day & Time
4	Handset Name
5	Battery Strength
6	Menu
7	Softkeys, each key is programmed to perform various functions.
8	Talk, to make or receive calls.
9	Menu scroll and volume key, to navigate menu items and adjust volume during talk.
10	End / Off, to terminate calls.
11	Flash, to access some services provided by the telephone company.
12	Conference
13	Redial / Pause
14	Intercom
15	Keypad
16	Microphone
17	Line-in-use indication
18	'Charge' indicator, illuminates when handset is being charged.
19	Page key, to page all handsets within range of the base unit.
20	'Charge' indicator, illuminates when handset is being charged.

  Base Unit

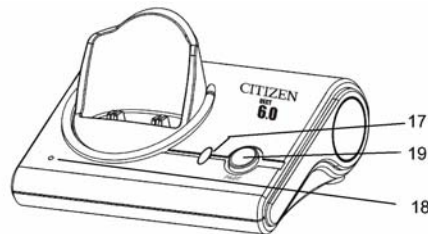


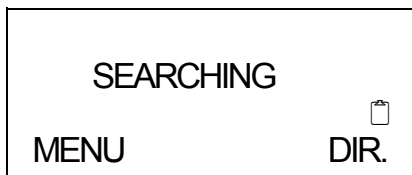 
Charger Unit

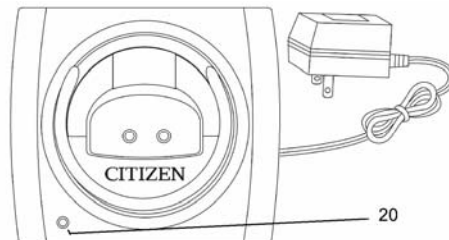




Powering On the Handset

When the handset is powered off, pressing and holding the  key can power it on.
If battery life is sufficient, the handset will power on. If not, it will remain powered off.




 After powering on, the handset will enter subscription mode and search for a registered base. A message as shown, will display on the screen.

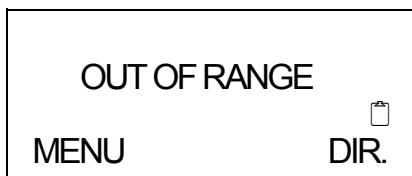


If the handset is successful in finding a base, the handset will enter the standby mode.
If the handset is unsuccessful in finding a base, the screen will show 'OUT OF RANGE'.

 Standby Mode

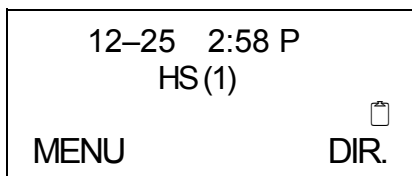

In standby mode, a registered handset displays as shown.

Powering Off the Handset

When the handset is powered on, press and hold the  key to power it off.

Range Condition

 
A warning indication will be provided to the user when the handset is out of range.



Registration

Before registering a handset to the base unit, the base unit should first enter the registration mode.


Press the [Page] key on the base for more than 3 seconds until the 'In Use' indicator begins to flash quickly.

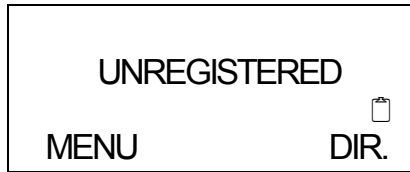

An unregistered handset displays as shown.



 
Press the [MENU] softkey, and then the [OK] softkey to enter 'REGISTRATION'.

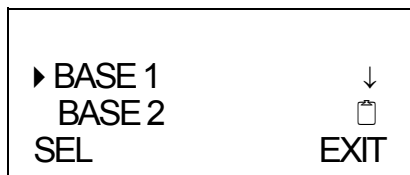


After pressing the [OK] softkey, a list of bases will be displayed.

There are 4 base positions available for registration.

 Select the BASE among BASE1 - BASE4, (For the first time of use, select 'BASE1'), then press the [SEL] softkey.

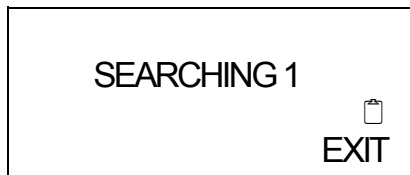

 
Now the handset begins searching for the base.



USING YOUR PHONE



 When the base has been found, you have to input the PIN code (4 digits) for the base. The default PIN code is printed on the backside label of the base (The code can be changed later).

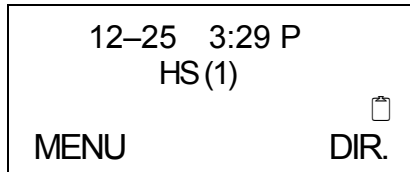


Then registration is completed.

BASE SETTINGS VIA HANDSET



The base options can be set using a handset registered to this base.
Press the [MENU] softkey, select 'BS SETTINGS' and press [OK].

 
Deregister a Handset

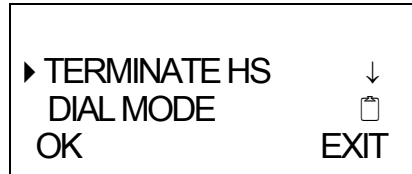

Select 'TERMINATE HS', and press [OK].




 Input the 4-digit PIN code.
The default PIN is printed on the backside label of the base.

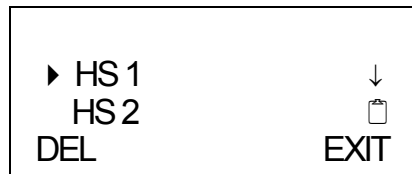


Use ▲ / ▼ to scroll the list of handsets (HS).
Press the [DEL] softkey to select a handset (except for the current handset).

 Dial Mode

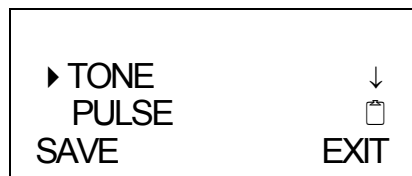

 Press the [MENU] softkey, select 'BS SETTINGS' and press [OK].
Use ▲ / ▼ to select 'DIAL MODE', and press [OK].
Press ▲ / ▼ to scroll the two options.
Press [SAVE] to save your setting.



BASE SETTINGS VIA HANDSET

Modify PIN

Press the [MENU] softkey, select 'BS SETTINGS', and press [OK].
Use ▲ / ▼ to select 'MODIFY PIN' and press [OK].

PIN ?	****	
OK	DEL	EXIT

Input the current 4-digit PIN.
Press [OK] to complete.
The default PIN is on the backside label of the base.

NEW PIN	****	
OK	DEL	EXIT

Input the new 4-digit PIN.
Press [OK] to complete.

CONFIRM	****	
OK	DEL	EXIT

Input the new PIN again to confirm.
Press [OK] to complete.
Please do not forget this new PIN code.
Now the new PIN will be stored in the base unit.

Flash Time

This function allows the user to set the flash time parameter according to your local telephone network settings when using the [Flash] key in some services, such as call waiting service and conference calling service, etc.

DIAL MODE	
▶ FLASH TIME	
OK	EXIT

Press the [MENU] softkey, select 'BS SETTINGS' and press [OK].
Use ▲ / ▼ to select 'FLASH TIME' and press [OK].



Use ▲ / ▼ to choose between the two options and then press [SAVE] to save your setting.
(‘SHORT’ = 300, ‘LONG’ = 650)

Set Base to Default

This function allows the user to restore the base settings to the factory default settings.



Press the [MENU] softkey
Use ▲ / ▼ to select ‘BS SETTINGS’ and press the [OK] softkey.
Select ‘BASE DEFAULT’ and press the [OK] softkey.



Input the 4-digit PIN.
The default PIN is on the backside label of the base.
Press the [OK] softkey to complete.
Then all settings on the handset will revert to the factory default values.



HANDSET SETTINGS

Alarm



Press the [MENU] softkey, select 'HS SETTINGS' and press the [OK] softkey. Select the 'ALARM CLOCK' and press the [OK] softkey.



Use ▲ / ▼ to select 'ON' or 'OFF'. Press the [SAVE] softkey, to save your setting.

Ring Setup



 
Press the [MENU] softkey, use ▲ / ▼ to select 'HS SETTINGS' and press [OK]. Select 'RING SETUP' and press [OK].




Use ▲ / ▼ to select the type of ring that you want use. (You can assign different ringtones and volumes for incoming intercom calls, and fixed line call ('INTC' is for intercom)).



Press the [OK] softkey. Use ▲ / ▼ to select 'MELODY' or 'VOLUME' setting.

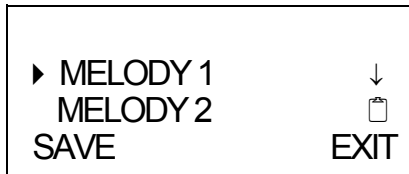

 If you enter the 'MELODY' setting
Use ▲ / ▼ to select a melody.
Press the [SAVE] softkey, to save your
setting.

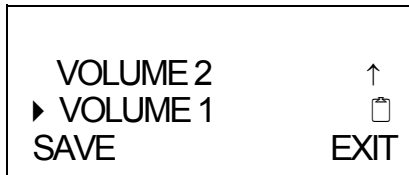

If you enter the 'VOLUME' setting.
Use ▲ / ▼ to select a volume level.
Press the [SAVE] softkey, to save your
setting.

Configure Ringtone for Incoming Calls via Exterior-line

Press the [MENU] softkey, select 'HS SETTINGS' and press [OK]. Select 'RING SETUP' by using ▲ / ▼ and then pressing [OK].
Select 'LINE RING', and then press [OK].
Select 'MELODY', and then press [OK].
Press ▲ / ▼ to select the desired ringtone, then press the [SAVE] softkey to save your setting.

Configure Ring Volume for Incoming Calls via Exterior-line

 
Press the [MENU] softkey, select 'HS SETTINGS' and press [OK]. Select 'RING SETUP' by using ▲ / ▼ and then pressing [OK].
Select 'LINE RING', and then press [OK].
Select 'VOLUME', and then press [OK].
Press ▲ / ▼ to select the desired volume, then press the [SAVE] softkey to save your setting.

Configure Ringtone for Intercom Calls

Press the [MENU] softkey, select 'HS SETTINGS' and press [OK]. Select 'RING SETUP' by using ▲ / ▼ and then pressing [OK].
Select 'INTC RING', and then press [OK].
Select 'MELODY', and then press [OK].
Press ▲ / ▼ to select the desired ringtone, then press the [SAVE] softkey to save your setting.

Configure Ring Volume for Intercom Calls


Press the [MENU] softkey, select 'HS SETTINGS' and press [OK].
Select 'RING SETUP' by using ▲ / ▼ and then pressing [OK].
Select 'INTC RING', and then press [OK].
Select 'VOLUME', and then press [OK].
Press ▲ / ▼ to select the desired volume, then press the [SAVE] softkey to save your setting.



Do Not Disturb



 Press the [MENU] softkey, select 'HS SETTINGS' and press [OK].
Select 'RING SETUP' by using ▲ / ▼ and then pressing [OK].
Select 'DO NOT DISTURB', and then press [OK].

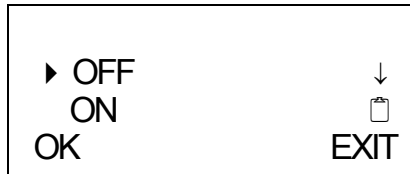

Press ▲ / ▼ to choose 'OFF' or 'ON', then press [OK] to save your setting.

If this option is set to 'ON', the screen will display "DO NOT DISTURB" in standby mode. Then no ring will be heard from any exterior-line (fixed line) call; however the call information will still be displayed on the screen, and the call can still be answered.



Tone Setup



Press the [MENU] softkey, select 'HS SETTINGS' and press [OK].
Select 'TONE SETUP' by using ▲ / ▼ and pressing [OK].



Then you can configure the displayed 3 types of tones.

Set Key Tone On/Off

 
Press the [MENU] softkey, select 'HS SETTINGS' and press [OK].
Select 'TONE SETUP' by using ▲ / ▼ and press [OK].
Select 'KEY TONE' and press [OK].
Use ▲ / ▼ to select 'OFF' or 'ON', then press [SAVE], to save your setting.

Set Battery Low Alert Tone On/Off

Press the [MENU] softkey, select 'HS SETTINGS' and press [OK].
Select 'TONE SETUP' by using ▲ / ▼ and press [OK].
Select 'BATTERY LOW' and press [OK].
Use ▲ / ▼ to select 'OFF' or 'ON', then press [SAVE] to save your setting.

Set Out of Range Alert Tone On/Off

Press the [MENU] softkey, select 'HS SETTINGS' and press [OK].
Select 'TONE SETUP' by using ▲ / ▼ and pressing [OK].
Select 'RANGE ALARM' and press [OK].
Use ▲ / ▼ to select 'OFF' or 'ON', then press [SAVE], to save your setting.



HANDSET SETTINGS

Language Setting



Press the [MENU] softkey, select 'HS SETTINGS' and press [OK]. Select 'LANGUAGE' by using ▲ / ▼ and then pressing [OK].



Use ▲ / ▼ to scroll through the 6 available language options (English, German, French, Italian, Spanish, Dutch). Select the desired language and then press [SAVE], to save your setting.

 
Change Handset Name

'HS (N)' is the default name of a handset after registering it to a base unit. The handset extension number 'N' (1—5) shows the handset as the 'N'th handset that registered to the base. The name will be shown on the screen when the handset is in standby mode.

A handset must be registered to the base before it can be assigned to a name.




To change the handset name to text format. Press the [MENU] softkey. Use ▲ / ▼ to select 'HS SETTINGS' and press [OK]. Select 'HS LABEL' and press [OK].

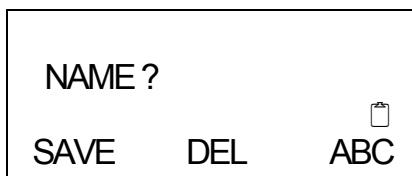


Press [DEL] to delete the current name, and use the keypad to input the new name. Then press [SAVE], to save your change.




Auto Answer

The handset can be set to answer incoming calls automatically. When the handset is not on the base unit or the charger cradle,  must be pressed to answer incoming calls. Auto answer mode can only be activated when the handset is on the base unit or charger cradle, in which case, the line will be automatically connected when the handset is picked up from the base unit or charger cradle.

 Set Auto Answer Mode On/Off

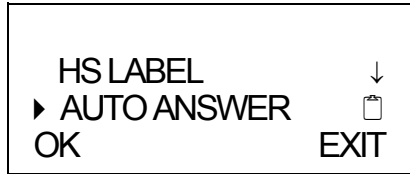


 Press the [MENU] softkey.
Use ▲ / ▼ to select 'HS SETTINGS' and press [OK].
Select 'AUTO ANSWER' and press [OK].

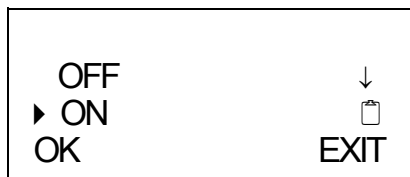

Use ▲ / ▼ to select 'OFF' or 'ON'.
Press [OK] to save your setting.

 
Call Barring

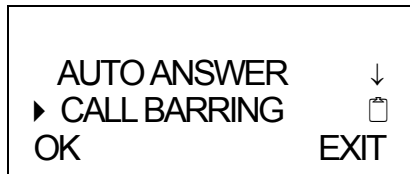


Handset can be set to disable outgoing fixed line calls.
To set the call barring mode 'ON' or 'OFF' Press the [MENU] softkey.
Use ▲ / ▼ to select 'HS SETTINGS' and press [OK].
Select 'CALL BARRING' and press [OK].



 Input the 4-digit PIN.
The default PIN is on the backside label of the base.
Press [OK] to confirm.



HANDSET SETTINGS

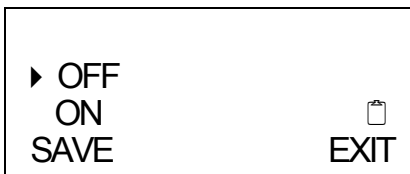 

Use ▲ / ▼ to select 'OFF' or 'ON'.
 Press [SAVE], to save your setting.
 If you set to 'ON', the screen will display
 "CALLS BARRED" in standby mode.

Date & Time Settings



Press the [MENU] softkey.
 Use ▲ / ▼ to select 'HS SETTINGS' and
 press the [OK] softkey.
 Select 'DATE & TIME' and press the [OK]
 softkey.

Set Date Format



Press the [MENU] softkey.
 Use ▲ / ▼ to select 'HS SETTINGS' and
 press the [OK] softkey.
 Select 'DATE & TIME' and press the [OK]
 softkey.
 Select 'DATE FORMAT' and press the
 [OK] softkey.



 
Use ▲ / ▼ to select your desired format.
 Press the [SAVE] softkey, to save your
 setting.
 Then the date will be displayed in the
 format you have set when returned to
 standby mode.



Set Date



Press the [MENU] softkey.
Use ▲ / ▼ to select 'HS SETTINGS' and press the [OK] softkey.
Select 'DATE & TIME' and then press the [OK] softkey.
Select 'SET DATE&TIME' and press the [OK] softkey.

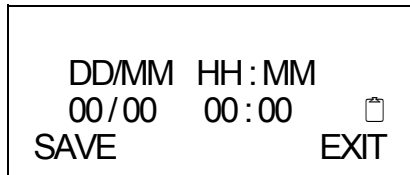


Use the keypad to input the date consecutively.
Press [SAVE], to save your setting.


Set Time Format



 Press the [MENU] softkey.
Use ▲ / ▼ to select 'HS SETTINGS' and press the [OK] softkey.
Select 'DATE & TIME' and then press the [OK] softkey.
Select 'TIME FORMAT' and then press the [OK] softkey.

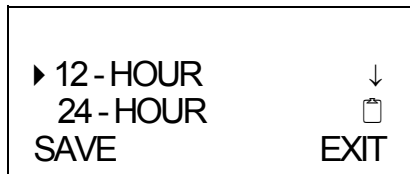


 Use ▲ / ▼ to select your desired format.
Press [SAVE] to save your setting.
Then the time will be displayed in the format you have set when returned to standby mode.




HANDSET SETTINGS

 Set Time

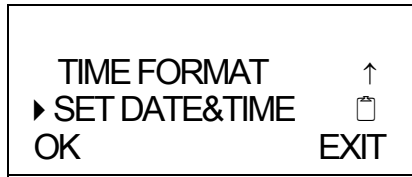

 Press the [MENU] softkey.
 Use ▲ / ▼ to select 'HS SETTINGS' and press the [OK] softkey.
 Select 'DATE & TIME' and press the [OK] softkey.
 Select 'SET DATE&TIME' and press the [OK] softkey.

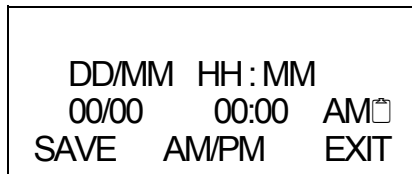

Use ▲ / ▼ to shift the position of the cursor.
 Use the keypad to input the time consecutively in the format you have set. (If you have already set the 'TIME FORMAT' to '12-HOUR' format, then you also need to choose 'a.m.' or 'p.m.' by using the [AM/PM] softkey).
 Press the [SAVE] softkey, to save your setting.



Set Handset to Default

 
This function allows the user to restore the handset settings to the factory default settings.



Press the [MENU] softkey.
Use ▲ / ▼ to select 'HS SETTINGS' and press the [OK] softkey.
Select 'HS DEFAULT' and press the [OK] softkey.



Input the 4-digit PIN.
The default PIN is on the backside label of the base.
Press the [OK] softkey to complete.
Then all settings on the handset will revert to the factory default values.



HANDSET SETTINGS

Display the Phonebook Entries



In standby mode, press the [DIR.] softkey to enter the telephone directory. Then the phonebook screen will be displayed.

 


Use ▲ / ▼ to access and scroll the phonebook entries.

Add Entries to the Phonebook



In standby mode, press the [DIR.] softkey to enter the telephone directory. Then the phonebook screen will be displayed. Press the [ADD] softkey to add a new entry.

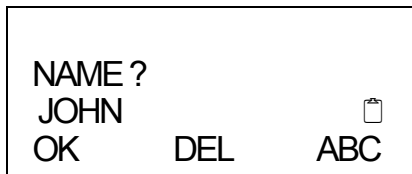

Use the keypad to input the name. Press the [ABC] ([123]) softkey, to switch the input mode between numerical mode and alphabetical mode. If you input the wrong words or numbers, use ▲ / ▼ and the [DEL] softkey to erase the errors. Press [OK] to complete the input.

In alphabetical mode, each numeric key is assigned a set of letters and symbols as shown below. Press the corresponding key until your desired letter is displayed. If two consecutive letters from the same key are required, just wait until the cursor moves to the next blank space before inputting.

Numeric:	1	2	3	4	5	6	7	8	9	0
Alpha:	Space	A,B,C	D,E,F	G,H,I	J,K,L	M,N,O	P,Q,R,S	T,U,V	W,X,Y,Z	




Symbols


You can also use [*] or [#] to insert the following special symbols in the name field.

* + , - . / @ : ; < = > ? { | } ~ [\] ^ _ ` ! " # \$ % & ' ()

Note: Name must start with an alphabetic character.


NUMBER ?		
12345678		
OK	DEL	EXIT 

Use the keypad to input the number. Press the [OK] softkey when finished. Press the [DEL] softkey to erase the digit(s) you inputted in error, and then input the correct ones.


▶ MELODY 1	↓
MELODY 2	
SAVE	EXIT

Use ▲ / ▼ to select a distinct ringtone for this entry. Press [SAVE] to complete.

Edit an Entry in the Phonebook

#18	12345678	
	JOHN SMITH	
	PHONE BOOK	
EDIT	DEL	EXIT

 In standby mode, press the [DIR.] softkey to enter the telephone directory. Use ▲ / ▼ to access and scroll the phonebook entries. When the entry that you want to edit appears, press the [EDIT] softkey. Then follow the steps as adding an entry to the phonebook.



Delete an Entry from the Phonebook

#18	12345678	
	JOHN SMITH	
	PHONE BOOK	
EDIT	DEL	EXIT

In standby mode, press [DIR.] softkey to enter telephone directory.
Use ▲ / ▼ to access and scroll the phonebook entries.
When the entry that you want to delete appears, press [DEL] softkey.

SURE TO DELETE ?		
YES		NO

Press [YES] to confirm your deletion.
Then this entry is deleted.

Delete All Entries in the Phonebook

PHONE BOOK		
38 ENTRIES		
ADD	DEL	EXIT

 
In standby mode, press the [DIR.] softkey to enter the telephone directory.
Press the [DEL] softkey to delete all entries.

SURE TO DELETE ?		
YES		NO


Press [YES] to confirm the deletion.
Then all entries are deleted.



Review the Caller ID List

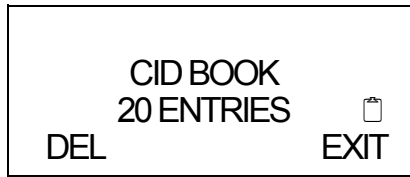


 In standby mode, press ▲ / ▼ to enter the Caller ID List.
Then the Caller ID book screen will be displayed.
Press ▲ to review the latest calls, press ▼ to review the earlier calls.

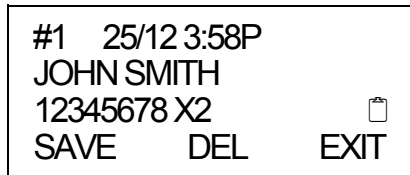


The date and time is also displayed in the format you have set.

 Save Caller ID Information to the Phonebook

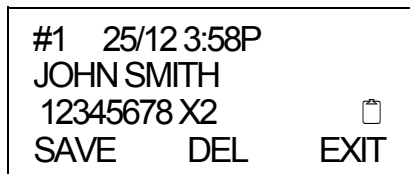


In standby mode, press ▲ / ▼ to enter the Caller ID List.
Use ▲ / ▼ to access and scroll the Caller ID List.
When the record that you want to save appears, press the [SAVE] softkey.
Then follow the same steps as adding an entry to the phonebook.

 Delete a Record from the Caller ID List

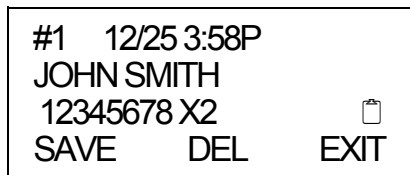

 In standby mode, press ▲ / ▼ to enter the Caller ID List.
Use ▲ / ▼ to access and scroll the Caller ID List.
When the record that you want to delete appears, press the [DEL] softkey.




HANDSET SETTINGS




Press [YES] to confirm the deletion.
Then this record is deleted.

 Delete All Records in the Caller ID List

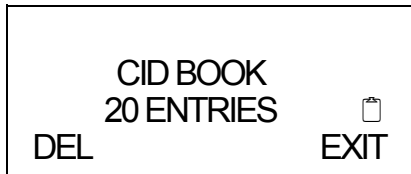

 In standby mode, press ▲ / ▼ to enter the Caller ID List.
Then the Caller ID book screen will be displayed.
Press the [DEL] softkey to delete all records.

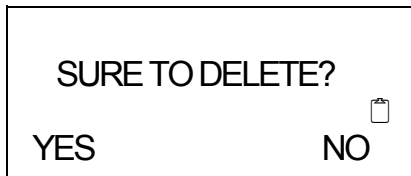

Press [YES] to confirm the deletion.
Then all records are deleted.

 
Review the Dialed Numbers List

Every handset can store its own last 10 dialed numbers independently, each number of up to 32 digits.

Press the [Redial] key, use ▲ / ▼ to review the dialed number(s).

If the displayed number matches with an entry in the phonebook, the corresponding name will also be shown.


Add a Dialed Number to the Phonebook

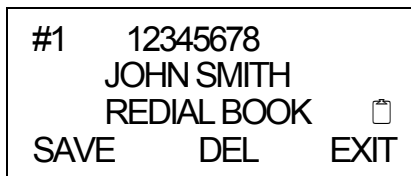

When the number you want appears, press the [SAVE] softkey.
Then follow the steps as adding an entry to the phonebook.



 
Delete a Dialed Number

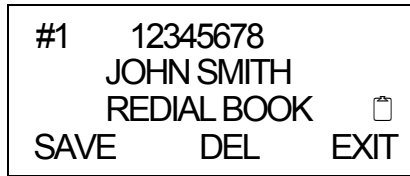

When the number that you want to delete appears, press the [DEL] softkey.




 Press the [OK] softkey.

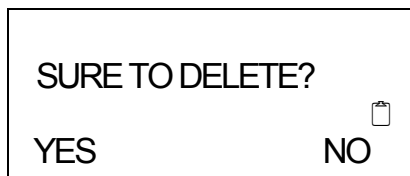

Press [YES] to confirm the deletion. Then this number is deleted.

 
Delete All Dialed Numbers

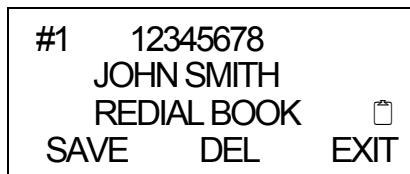

Press the [Redial] key. Press the [DEL] softkey.



 Press ▼ to select 'DELETE ALL'. Then press the [OK] softkey.



HANDSET SETTINGS


DELETE ALL ?

YES NO 

Press [YES] to confirm the deletion.
Then all numbers are deleted.



 
Method 1: Dial a Number

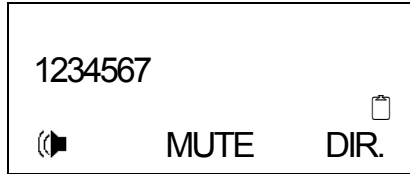

Press .
Input the number.




 Or:
Input the number.
(You may use the [DEL] softkey to delete the digits).
Press the [CALL] softkey or .

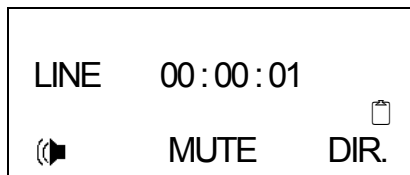

During the call:
Press the softkey to toggle hands-free mode. Press it again to quit this mode.
Press the [MUTE] softkey to disable the microphone. For private discussions, press / to adjust the volume.
Press to terminate the call.

 
Method 2: Call from the Phonebook

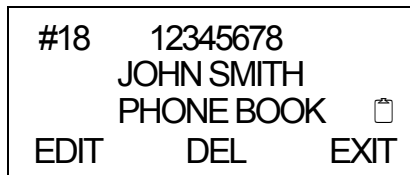



Press the [DIR.] softkey to review the phonebook.
Use / to scroll to the number you need.
Press .Press to terminate the call.

 Method 3: Call from the Caller ID List



Press / to review the Caller ID list.
Use / to scroll to the number you need.
Press .Press to terminate the call.



Method 4: Call from Dialed Numbers List

Press [Redial] key to review the dialed numbers.
Use ▲ / ▼ to scroll to the number you need.
Press .
Press  to terminate the call.

Method 5: Call the Last Dialed Number

Press .
Press the [Redial] key to dial out the last dialed number.
Press  to terminate the call.

Note: Putting the handset on the base unit can also terminate the call.

Enter a Pause in the Dialing Sequence

The [Redial/Pause] key allows you to add a 3-second pause during pre-dialing or when storing a number in the phonebook.
To add a pause, press the [Redial/Pause] key at your desired position when inputting or editing a phone number, and a “P” appears on the screen.
For a longer delay, press the [Redial/Pause] key additional times.

Note: The number you want to store cannot have more than 24 digits, including the pause. One “P” counts as one digit.



 
Locate Misplaced Handset(s) with Base Unit

To locate the handset(s) while not on the base unit, press the [Page] key on the base unit. Then the handset(s) in range will display 'PAGING FROM BASE' and emit an alert signal that is different from the exterior-line (fixed line) calls.


To stop the paging, press [Page] on the base unit again or press [EXIT] on the handset. If no handset answers, the paging will stop automatically after 1 minute.

- Note:**
1. The handset being paged will ring even if the ringer has been set to 'OFF'.
 2. If two handsets are engaging in an intercom talk, then both handsets can only hear one beep instead of alert.


Intercom between Handsets

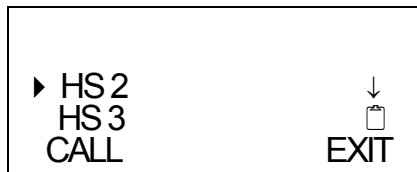

 
Press the [Int.] key on a handset in standby mode. Then the screen will show all the other available handsets in range of the base unit. ('HS' is for 'handset').

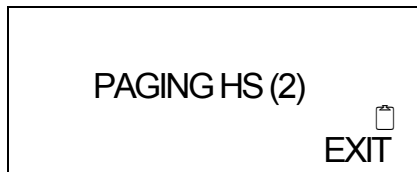

 
Use ▲ / ▼ to scroll to the handset you want to intercom with and press [CALL]. For instance, if HS (2) is being paged by HS (1), HS (1) will display 'PAGING HS (2)'.

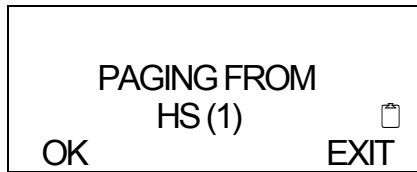


 HS (2) will ring and display 'PAGING FROM HS (1)'.

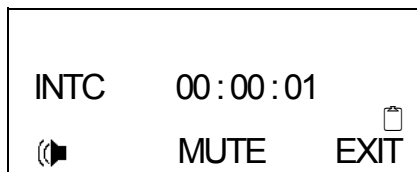


Press the [Int.] key,  or the [OK] softkey on HS (2) to answer the intercom call.

 If HS (2) does not want to answer, press the [EXIT] softkey, then the ring will stop.





Transfer a Call to another Handset

  
During a call, the current call can be transferred to another handset as described below.

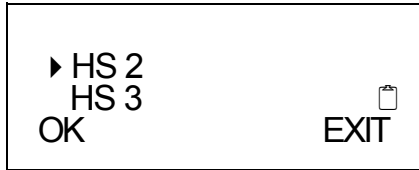

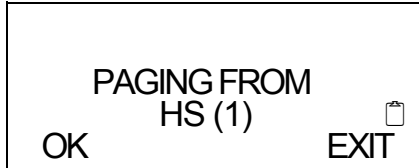

 
When a handset is engaging in an exterior-line (fixed line) call. Press the [Int.] key and use ▲ / ▼ to scroll to the handset you want to transfer this call to, then press the [OK] softkey.

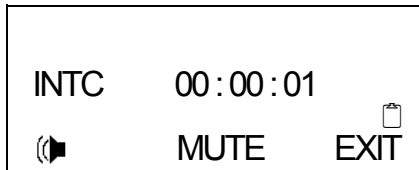

If you do this from HS (1) to HS (2), then HS (2) rings and displays 'PAGING FROM HS (1)'. On Handset (2), press , [Int.] or [OK] to answer the paging and then talk with Handset (1). (Internal talk).



 Now the initiator of the transfer can talk with the party to be transferred to, and then the initiator can press  to complete the transfer. If the party being transferred to does not want to answer the paging, press  or the [EXIT] softkey to reject it.

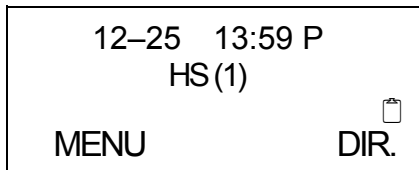


Then the handset being paged stops ringing and returns to standby mode, and the initiating handset resumes the exterior-line talk.




Call Conferencing

 
This cordless system supports 'conference calls' up to 3 parties (2 handsets and 1 exterior-line call).

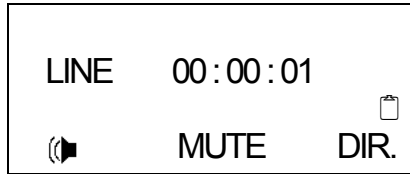

 
When one handset is engaging in an exterior-line (fixed line) call, press the [Int.] key on that handset to put the current call on hold and call another handset by way of intercom.

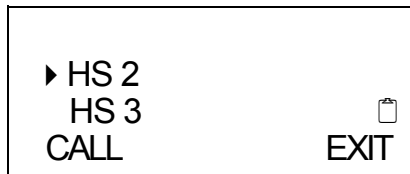

 
Use ▲ / ▼ to scroll to the handset you want. Then press the [CALL] softkey to page.

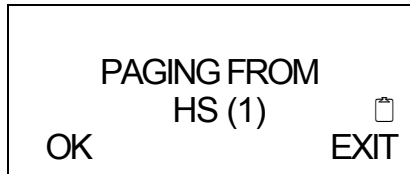

 
If you do this from HS (1) to HS (2), then HS (2) rings and displays 'PAGING FROM HS (1)'.

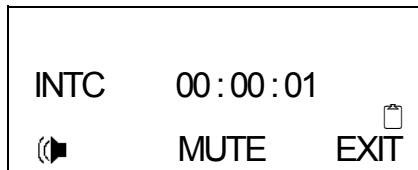

 
On Handset (2), press , [Int.] or [OK] to answer the paging and talk with Handset (1). (Intercom talk).




CALL CONFERENCING

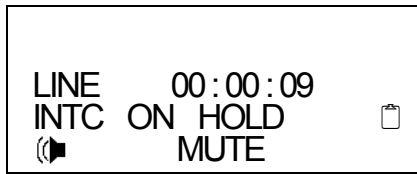 

 
When the intercom call is established, on the initiating handset {in this case is Handset (1)}, pressing the [Int.] key can switch between the intercom talk and exterior-line talk.

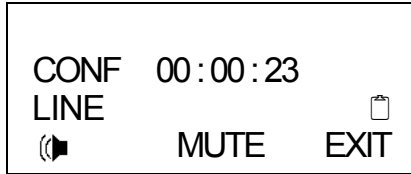

 
After the initiating handset being switched to 'INTC' (intercom) call, press the [CONF] key on the initiating handset can talk with the two parties (exterior-line party, and intercom party) simultaneously, which is the conference mode.

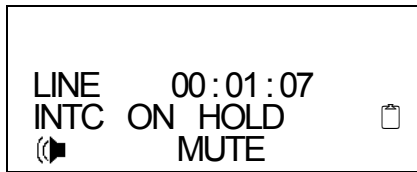

 In conference mode, press [Int.] key on the initiating handset can also switch between the two parties, and press [CONF] key during intercom talk can return to conference mode again.

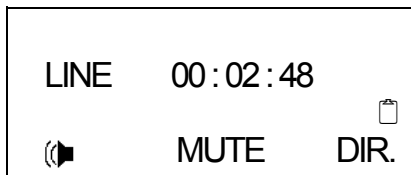


On any handset, pressing  or [EXIT] can retreat from the current conversation and return to standby mode> The other handset will continue the exterior-line call. To end the call, make sure that both handsets have quit.

Note: If your handset has already retreated from the conversation; you can still join in to the conversation again by following the procedures stated on Page 38.





Via Exterior-line (Fixed line)

 
Without Caller ID

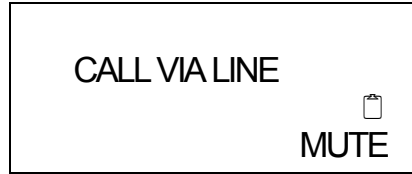

With Caller ID

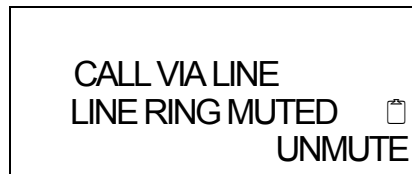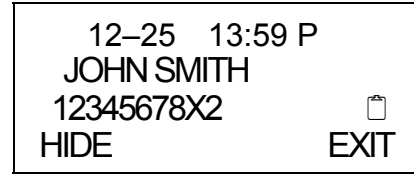  


 When the phone rings, if you want to mute the ringer, press the [MUTE] softkey or . Press the [UNMUTE] softkey to resume the ringer.

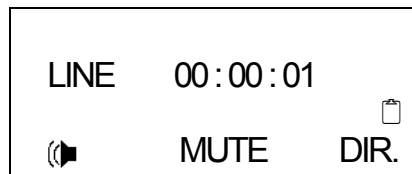


Press to answer the call.
Press / to adjust the volume.
Press to end the call.

 
Note: If 'auto answer mode' is set to 'ON', when the ring sounds, there is no need to press , just picking the handset up off the base (or charging cradle) can answer the call automatically.







RECEIVING A CALL

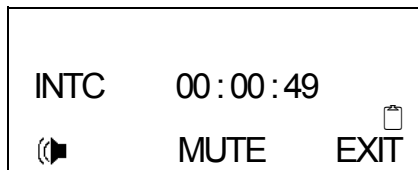 During Intercom

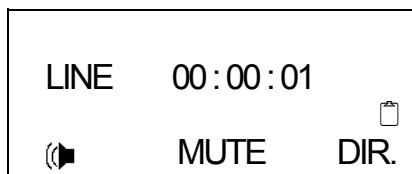 


During intercom talk, if an exterior-line call comes, both handsets will hear intermittent beeps. Then on any handset, pressing  can terminate the current intercom and answer the incoming call.



Press  /  to adjust the volume. Press  to end the call.

Switch to a Waiting Call

 Note: This service may require subscription from your local telephone company.

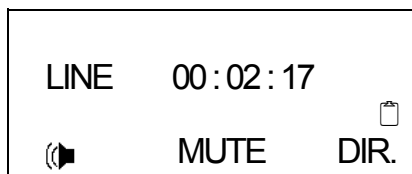


During an exterior-line call, press the [Flash] key to put the current exterior-line call on hold and answer the incoming waiting exterior-line call. Pressing the [Flash] key again can resume the first exterior-line call.



Mute a Call


You can mute a call while discussing matters with a nearby person in privacy without transmitting your voice over.

 During an Exterior-line call

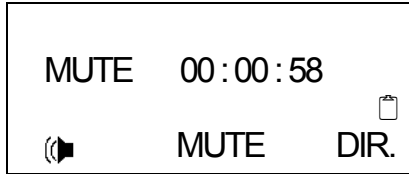


Press the [MUTE] softkey.
Then 'MUTE' is shown on the screen to indicate it is muting the microphone.
Press the [MUTE] softkey again to un-mute the microphone.

  During Intercom

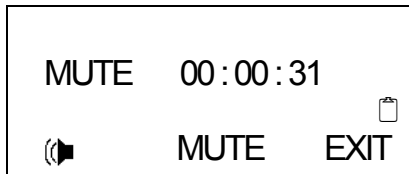


 
Press the [MUTE] softkey.
Then 'MUTE' is shown on the screen to indicate it is muting the microphone.
Press the [MUTE] softkey again to un-mute the microphone.




TROUBLESHOOTING

Please refer to the following tips before calling for technical assistance:

Problem(s)	Possible Cause(s)	Solution(s)
No dial tone is heard when pressing  .	<ol style="list-style-type: none"> 1. The base unit is not properly connected to the fixed line. 2. Too far from the base unit. 3. Batteries are low (low battery icon is displayed). 	<ul style="list-style-type: none"> ▪ Check the cables. ▪ Move closer to the base unit. ▪ Charge the batteries.
When putting the handset on the base unit, no beep is heard.	<ol style="list-style-type: none"> 1. The handset is not placed properly on the base unit. 2. Charging contacts are dirty. 	<ul style="list-style-type: none"> ▪ Take the handset off the base unit and put it back again. ▪ Clean charging contacts with a clean and dry cloth.
Battery icon remains empty although the handset has charged for 24 hours.	<ol style="list-style-type: none"> 1. Handset batteries are defective. 2. Handset is not placed properly on the base unit. 3. The power adapter is not properly connected. 	<ul style="list-style-type: none"> ▪ Please contact your dealer to purchase new rechargeable batteries. ▪ Check whether the power adapter is properly connected to the main point.
No display on the screen.	<ol style="list-style-type: none"> 1. Batteries are uncharged. 2. The phone is not properly connected. 	<ul style="list-style-type: none"> ▪ Charge the batteries. ▪ Make sure your phone is properly plugged in.
Bad audio quality (crackles, echo, etc.)	<ol style="list-style-type: none"> 1. Interference from nearby electrical appliance. 2. Base unit is installed in a room with thick walls. 3. The handset is too far from the base unit. 	<ul style="list-style-type: none"> ▪ Move the nearby electrical appliance to a different location. ▪ Install the base unit in a different room. ▪ Move closer to the base unit.
Cannot hear the other party clearly / speaker too quiet.	<ol style="list-style-type: none"> 1. The volume is set to minimum. 	<ul style="list-style-type: none"> ▪ Press ▲ / ▼ to adjust the phone volume.



The phone does not ring when a call comes in.	1. The ringer is off.	▪ Turn on the ringer.
Cannot call a phone number.	1. The handset has lost link with the base unit.	▪ Page the handset from the base unit to ensure connectivity exists.

 

CARE AND MAINTENANCE

The following suggestions will help you care for the telephone so you can enjoy it for years.



Keep the telephone dry. If it gets wet, wipe it dry immediately. Liquids might contain minerals that can corrode the electronic circuits.



Use and store the telephone only in normal temperature environments. Temperature extremes can shorten the life of electronic devices, and distort or melt plastic parts.



Handle the telephone gently and carefully. Dropping it can damage circuit boards and cases, and can cause the telephone to work improperly.



Keep the telephone away from excessive dust and dirt, which can cause premature part wear.



Wipe the telephone with a damp cloth occasionally to keep it looking new. Do not use harsh chemicals, cleaning solvents, or strong detergents to clean the telephone.