

# QUICK START GUIDE



## Handset Installation

1. Open the back cover of the handset, and insert the supplied batteries into the compartment according to polarity marks.
2. Place one handset on the base unit and the other one on the charger.

## Base Unit Installation


1. Plug one end of the telephone line cord into jack at the bottom of the base unit and plug the other end of the cord into a modular telephone jack. (If your wall jack is not modular, contact your local telephone company for assistance).
2. Plug the supplied DC adapter's plug into the round jack at the bottom of base unit and the other end into a standard 120 AC outlet. The charge indicator will illuminate.

## Charger Installation

Plug the DC adapter into a standard wall outlet for charging. The charge indicator illuminates.


**Note:** Charge all batteries for at least 15 hours prior to initial use.

## Powering On the Handset

When the handset is powered off, press and hold the  key to power it on.

After powering on, the handset will enter subscription mode and search for a registered base. The screen will show 'SEARCHING'. If the handset is successful in finding a base, the handset will enter the standby mode which shows 'HS(#)' on the screen. If unsuccessful, the screen will show 'OUT OF RANGE'.

## Powering Off the Handset

When the handset is powered on, press and hold the  key to power it off.





## Registration

An unregistered handset displays 'UNREGISTERED' on the screen. To register, do as follows:

1. Press the [Page] key on the base unit for more than 3 seconds until the 'In Use' indicator begins to flash quickly.
2. Press [MENU] softkey and select 'REGISTRATION'. Then press [OK].
3. Select one of 4 bases available, now the handset begins searching for the base.
4. When the base has been found, input the PIN code (4 digits). The default PIN code is printed on the backside label of the base. Then registration is completed.

## HS Settings

### Language setting

1. Press the [MENU] softkey. Select 'HS SETTINGS' and press [OK]. Select 'LANGUAGE' by using  /  and then press [OK].
2. Use  /  to scroll through the 6 available language options. Select the desired language and press [SAVE] to save your setting.

### Paging

To locate misplaced handset(s) with the base unit, press the [Page] key on the base unit. Then the handset(s) in range will display 'PAGING FROM BASE'.

## Making a Call

### Method 1: Dial a Number



Press , and input the number.

Or

Input the number, and then press the [CALL] softkey or .



### Method 2: Call from Phonebook

Press the [DIR.] softkey to review the phonebook, and use ▲ / ▼ to scroll to the number you need.

Press  to make a call, and press  to terminate the call.



### Method 3: Call from Caller ID List

Press ▲ / ▼ to review the Caller ID list, and press ▲ / ▼ to scroll to the number you need.

Press  to make a call, and press  to terminate the call.

### Method 4: Call from Dialed Numbers List

Press the [Redial] key to review the dialed numbers, and use ▲ / ▼ to scroll to the number you need.

Press  to make a call, and press  to terminate the call.

### Method 5: Call the Last Dialed Number

Press , and press the [Redial/Pause] key to dial out the last dialed number.


Press  to terminate the call.

**Note:** Putting the handset on the base unit can also terminate the call.


## Receiving a Call

### 1. Via Exterior-line (Fixed line)

Without Caller ID

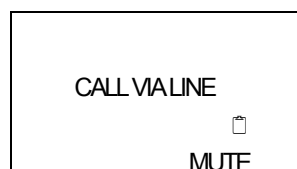


With Caller ID

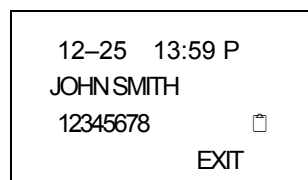

Press  to answer the call, press ▲ / ▼ to adjust the volume, and press  to end the call.

### 2. During Intercom

During intercom talk, if an exterior-line call comes, both handsets will hear intermittent beeps. Then on either handset, press  to terminate the current intercom and answer the incoming call.

### 3. Switch to a Waiting Call

During an exterior-line call, press the [Flash] key to put the current exterior-line call on hold and answer the incoming waiting exterior-line call. Press the [Flash] key again to resume the first exterior-line call.

**Note:** This service may require subscription from your local telephone company.

## Troubleshooting

The phone does not ring when a call comes in.	The ringer is off.	▪ Turn on the ringer.
Cannot call a phone number.	The handset has lost link with the base unit.	▪ Page the handset from the base unit to ensure connectivity exists.